



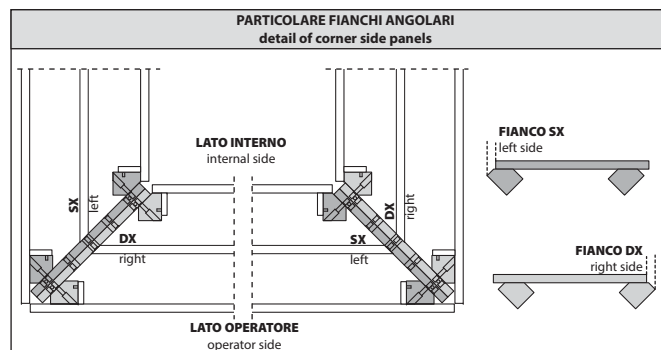

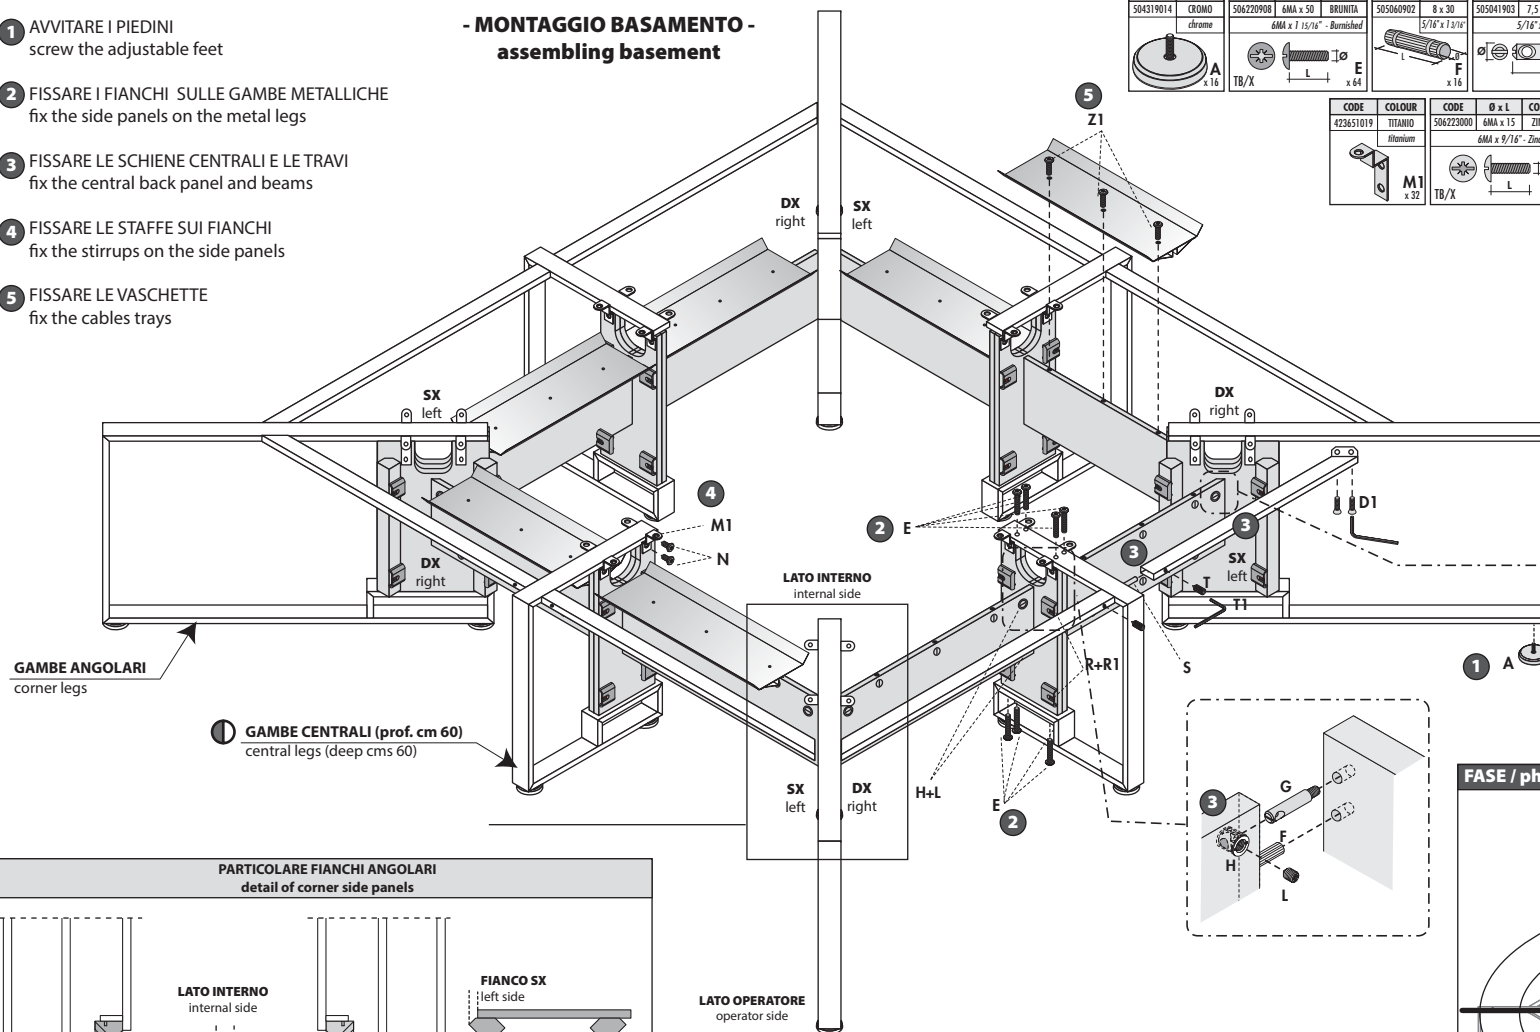






















FASI / phases 1-2-3-4-5

- 1** AVVITARE I PIEDINI
screw the adjustable feet
- 2** FISSARE I FIANCHI SULLE GAMBE METALLICHE
fix the side panels on the metal legs
- 3** FISSARE LE SCHIENE CENTRALI E LE TRAVI
fix the central back panel and beams
- 4** FISSARE LE STAFFE SUI FIANCHI
fix the stirrups on the side panels
- 5** FISSARE LE VASCHETTE
fix the cables trays


**- MONTAGGIO BASAMENTO -
assembling basement**



CODE COLOUR 504319014 CROMO chrome	CODE Ø x L COLOUR 504220908 6MA x 50 BRUNITA 6MA x 1 15/16" - Burnished	CODE Ø x L COLOUR 505060992 8 x 30 5/16" x 1 3/8" ZINCATO 5/16" x 1 3/8" - Zinc Plated	CODE Ø x L COLOUR 505041903 7,5 x 36 5/16" x 1 3/8" - Zinc Plated	CODE Ø COLOUR 505031903 14 9/16" - Zinc Plated	CODE COLOUR 504072219 ZINCATO Zinc Plated	CODE COLOUR 505041932 ZINCATO Zinc Plated	CODE COLOUR 505031921 NICKEL Nikkol
 A x 16	 E x 64	 F x 16	 G x 16	 H x 16	 L x 16	 B1 x 16	 x 16
CODE COLOUR 423651019 TITANIO Titanium	CODE Ø x L COLOUR 504223000 6MA x 15 ZINCATO 6MA x 9/16" - Zinc Plated	CODE Ø x L COLOUR 505041902 10 x 36 ZINCATO 3/8" x 1 3/8" - Zinc Plated	CODE COLOUR 507000113 INOX	CODE COLOUR 505182021 FERRO Iron	CODE Ø x L COLOUR 504223009 6MA x 15 ZINCATO 6MA x 9/16" - Zinc Plated	CODE Ø x L COLOUR 504224209 6MA x 25 ZINCATO 6MA x 1" - Zinc Plated	CODE Ø x L COLOUR 504941908 NERO BRUNITO 1/8" x 1" - Burnished
 M1 x 32	 N x 64	 S 8	 T x 8	 T1 x 1	 T x 8	 T x 8	 T x 8
CODE COLOUR 505070703 NERO black	CODE Ø x L COLOUR 504941908 3,5 x 25 BRUNITO 1/8" x 1" - Burnished	CODE Ø x L COLOUR 505070703 NERO black	CODE Ø x L COLOUR 504941908 3,5 x 25 BRUNITO 1/8" x 1" - Burnished	CODE Ø x L COLOUR 505070703 NERO black	CODE Ø x L COLOUR 504941908 3,5 x 25 BRUNITO 1/8" x 1" - Burnished	CODE Ø x L COLOUR 505070703 NERO black	CODE Ø x L COLOUR 504941908 3,5 x 25 BRUNITO 1/8" x 1" - Burnished
 R 4	 R 4	 R 4	 R 4	 R 4	 R 4	 R 4	 R 4

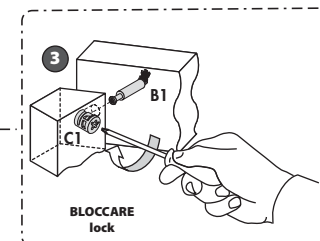**FASE / phase 6**

- 6** ATTENZIONE! PRIMA DI FISSARE I PIANI
METTERE IN BOLLA TUTTA LA STRUTTURA!
Attention! Level the structure before fixing the tops!

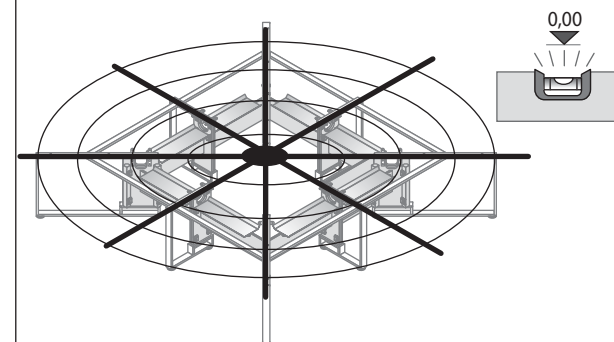

7 ACCOPIARE I PIANI
couple the tops

8 FISSARE I PIANI DA SOTTO
fix the tops from below


ATTENZIONE! INDICAZIONI PARTICOLARI PER PIANI IN VETRO:
FISSAGGIO MANUALE DELLE VITI! (NON USARE L'AVVITATORE)

fix the screws manually!


attention! special indications for glass tops:

fix the screws manually! (do not use electric screwdriver)


9 INSERIRE I PANNELLI DI TAMPONAMENTO A SCATTO
insert the blind panels to "click"



CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	COLOUR
506223000	6MA x 15	ZINCATO	506225308	6MA x 30	ZINCATO	505070702	NERO
6MA x 9/16" - Zinc Plated			6MA x 1 3/16" - Zinc Plated			black	
TB/X			TB/X			Q	
L			L			x 64	
N			P				
x 32			x 32				

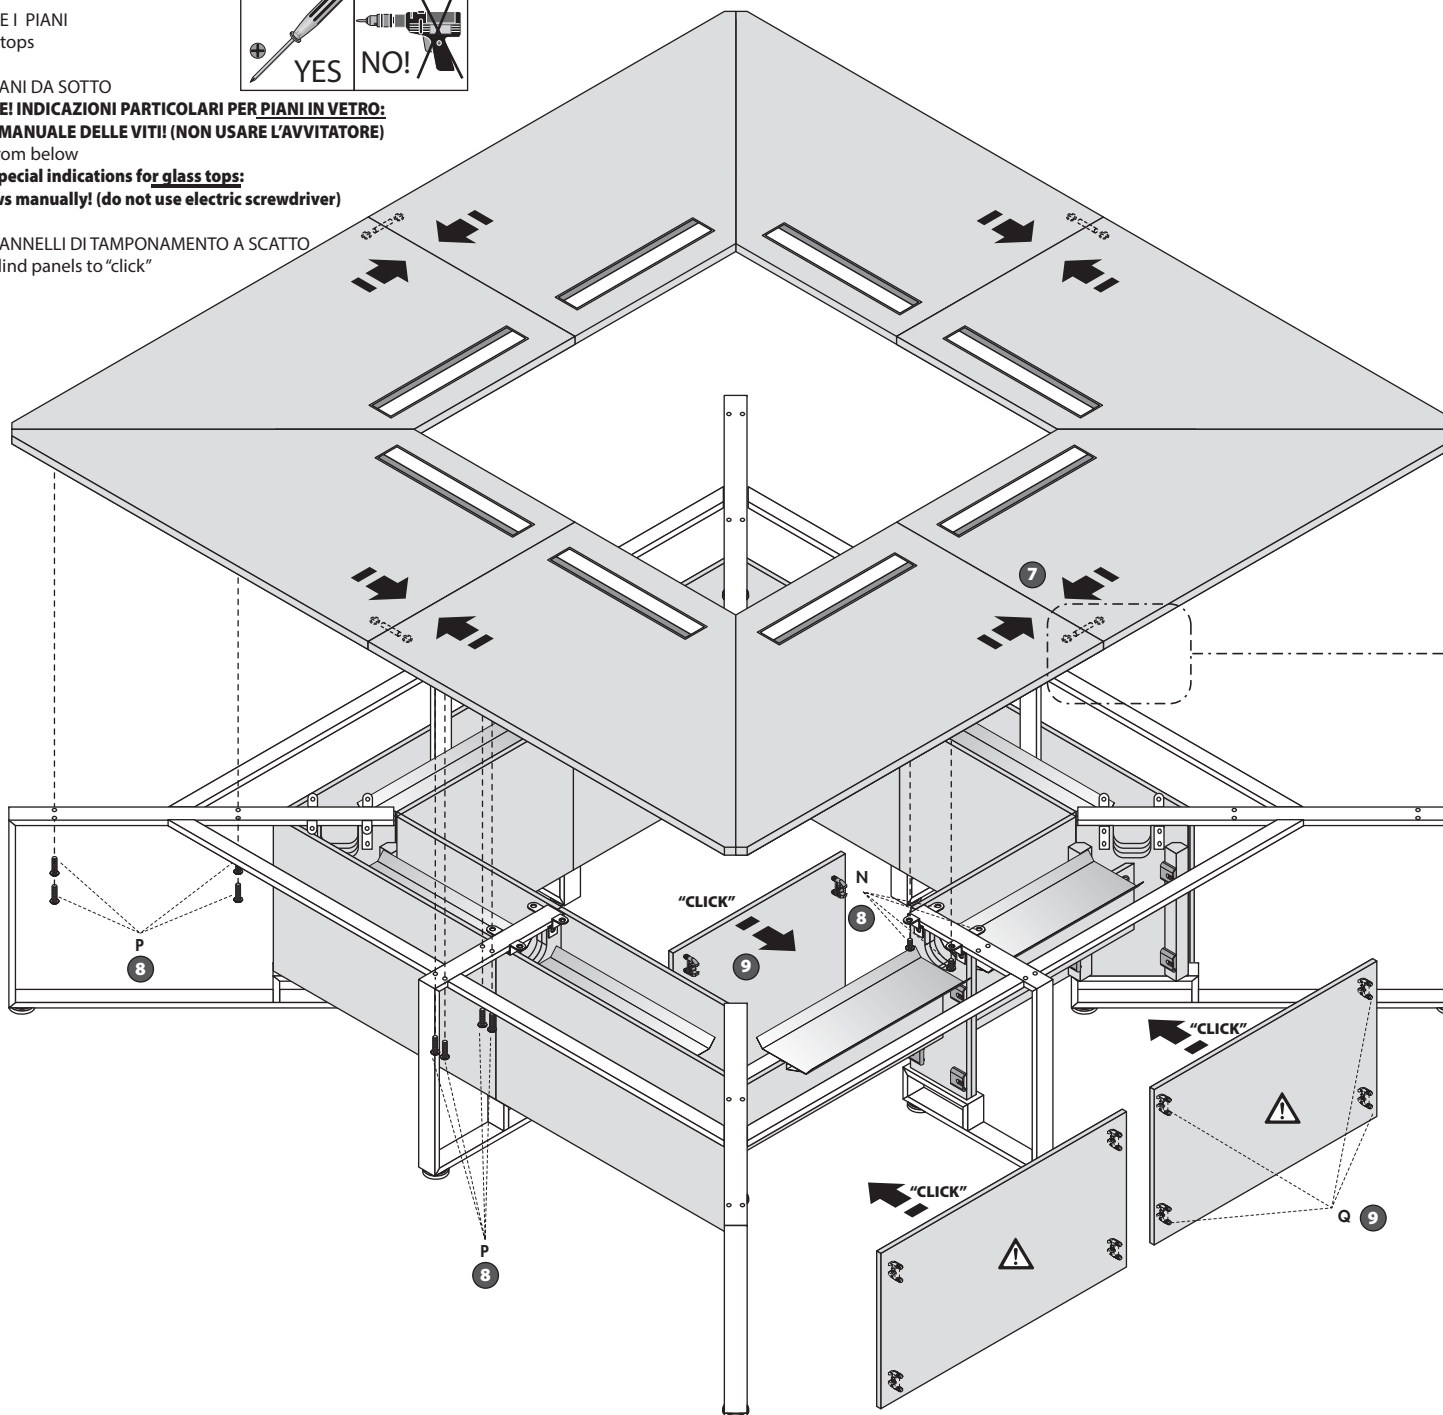

**PARTICOLARE CONNESSIONE
TRA I 2 PIANI**
detail connection of 2 tops

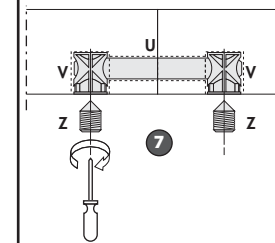

CODE	Ø x L	COLOUR	CODE	Ø	COLOUR	CODE	COLOUR
505041906	10 x 80	ZINCATO	505031912	16	ZINCATO	506062109	ZINCATO
3/8" x 3 1/8" - Zinc Plated			3/8" x 5/8" - Zinc Plated			Zinc Plated	
U			V			Z	
x 4			x 8			x 6	

- SEZIONE VERTICALE -
- vertical section -

